


de Installationsanleitung
en Installation Instructions
fr Instructions d'installation
it Istruzioni di montaggio
nl Installatie-aanwijzing
zh 安装说明书







es Instrucciones de montaje
pt Instruções de montagem
sv Installationsanvisning
fi Asennusohje
da Installationsvejledning

el Οδηγίες Εγκατάστασης
sk Návod na montáž
cs Montážní list
pl Instrukcja montażu
hu Telepítési leírás

RAA...
QAA...

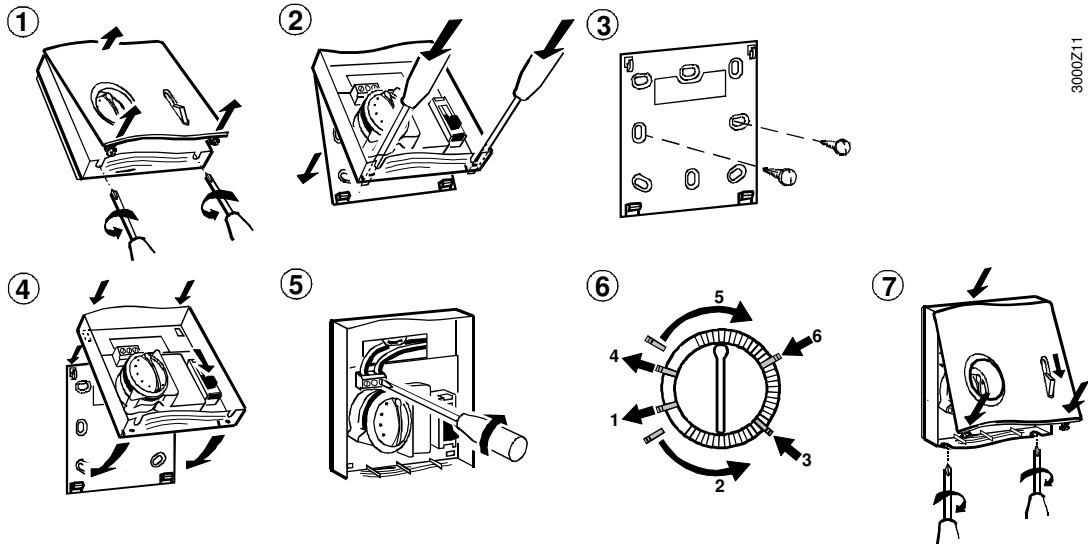



3000Z11

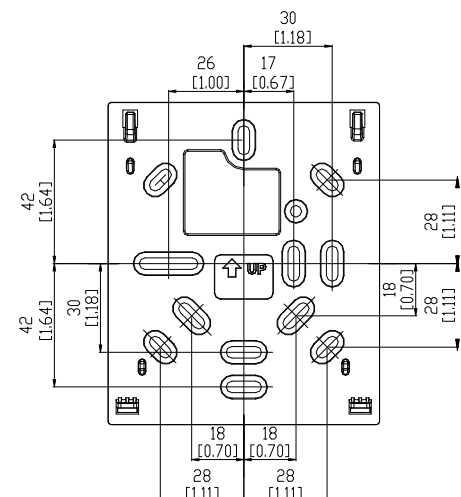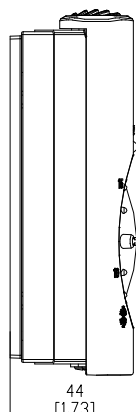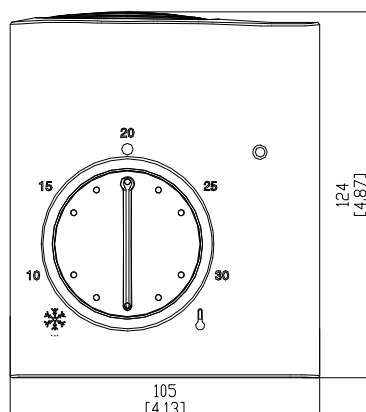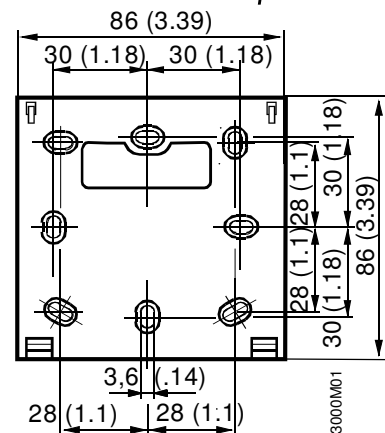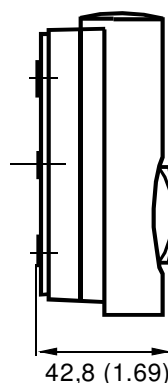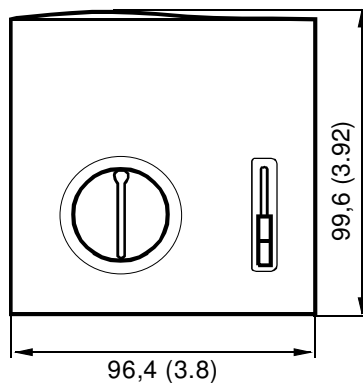

RAA20LD
RAA200



Dimensions in mm (inches)

RAA10

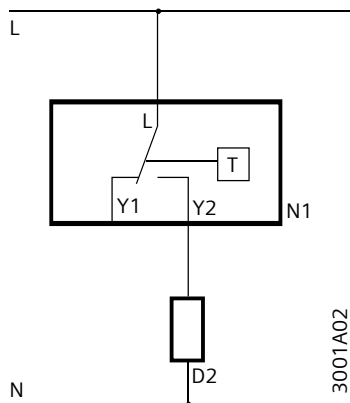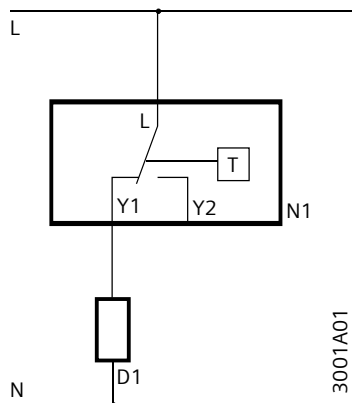



- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage AC 24...250V
- N1 Room thermostat
- Y1 Control output "Heating", AC 24...250V
- Y2 Control output "Cooling", AC 24...250V
- N Neutral
- T Thermostat element (gas-filled diaphragm)

RAA20, RAA20LD, RAA200

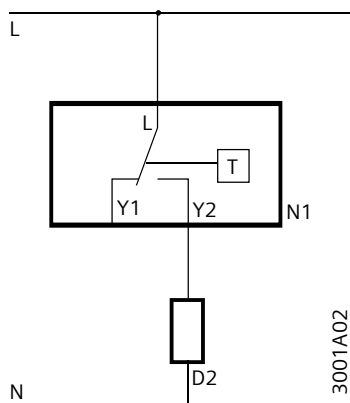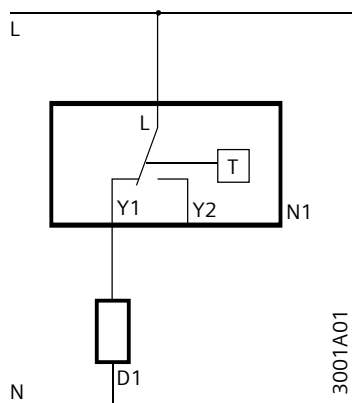

- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage AC 24...250V
- N1 Room thermostat
- Y1 Control output "Heating", AC 24...250V
- Y2 Control output "Cooling", AC 24...250V
- N Neutral
- T Thermostat element (gas-filled diaphragm)

RAA30

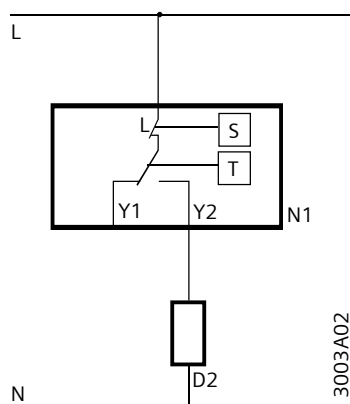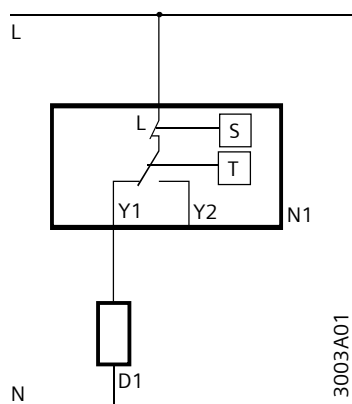


RAA30 - Heating mode

RAA30 - Cooling mode

- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage AC 24...250V
- N1 Room thermostat
- S ON/OFF switch
- Y1 Control output "Heating", AC 24...250V
- Y2 Control output "Cooling", AC 24...250V
- N Neutral
- T Thermostat element (gas-filled diaphragm)

RAA40

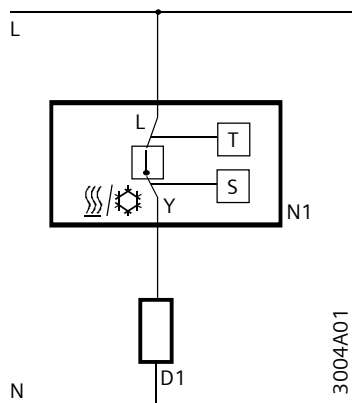

- D1 Zone valve or thermal valve for heating
- L Switching voltage AC 24...250V
- N1 Room thermostat
- S Selector for Heating / OFF / Cooling
- Y Control output "Heating", AC 24...250V
- T Thermostat element (gas-filled diaphragm)